DIRECTA ceramir® CAD/CAM BLOCKS

Repairability

Repair of the restoration
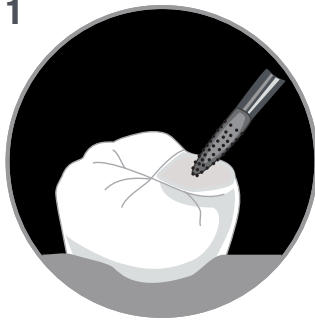
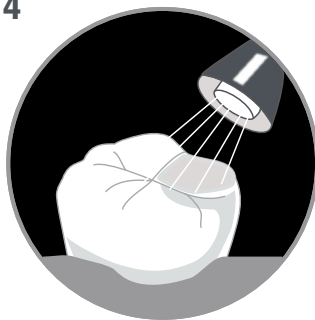**1** Roughen fractured area
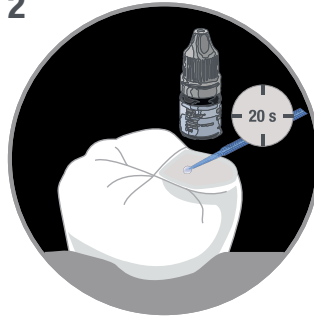
2 Apply edelweiss VENEER BOND — 20 s

3 Dry surface with air — 5 s

Repair of the restoration

4 Light cure

5 Apply composite and light cure

6 Polish